

How to Reset your Mountbatten

There are two reset methods. The diagrams show which keys to press; in every case, the appropriate keys are coloured black.

A. If you have files saved in memory:

See Figure 1.

1. Turn the MB off. Please disconnect all cables (You can leave the power supply on if you want to.)
- 2.
3. Press **and hold** New Line + Command + dot 2 + Backspace.
4. Turn the MB on
5. Release the keys once the head starts moving.

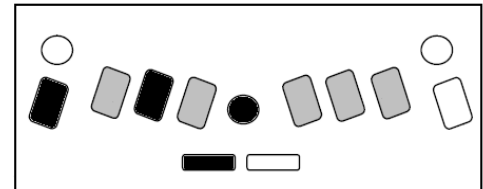


Figure 1.

Reset A: preserves files in the memory.

This will reset all the commands to the Factory default.

B. If you have no files saved in memory (or if Step A does not work):

See Figure 2.

1. Turn the MB off
2. Press **and hold** Space + Command + dot 5 + Enter key
- 3.
4. Turn the MB on
5. Release the keys once the head is moving.

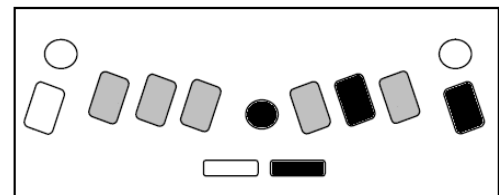


Figure 2.

Reset B: the absolute reset. Deletes the contents of memory.

This will reset all the commands and the memory to the Factory default.

What happens now?

1. The Mountbatten should say: "Good Day. Not charging. Learn Mode, Mimic not found"
2. The embossing head should also move.
3. When you do a hard reset, the command key is deactivated. You need to reactivate it, by pressing the keys shown in Figure 3.

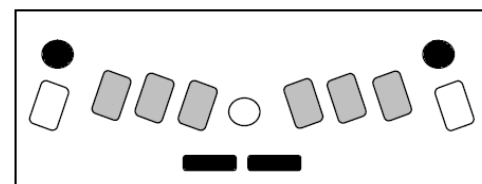


Figure 3.

Activating and deactivating the Command Key.